

*A P A R I S*  
— C H E Z —  
ANTOINETTE  
POISSON.

*Edition & impression à la planche,  
Papiers dominotés - papiers peints - textiles - objets.*

You have chosen a wallpaper *A Paris Antoinette Poisson* and We thank you.  
Our roll wallpaper is printed in Paris with high quality pigment ink on a cellulose and polyester backing.

We recommend that you have the wallpaper installed by a professional who will take the necessary care for an optimal result.

## NOTICE OF INSTALLATION

---

- Choose a non-woven special glue.
- Choose a plastic slipper for vinyl and foamed papers.
- Remember to remove everything that is attached to the walls: switches, sockets, lights...
- For paper with connections, make sure to match each edge: when cutting, take into account the connection height indicated on the roll.

### 1. Prepare the non-woven wallpaper

Prepare the glue to be upholstered, according to the dosages and directions for use indicated on the product. To facilitate the installation of the first length, draw a line of guide on the wall:

- Starting at an angle, at a window or door edge, measure the width of a lé: beforehand, check the verticality of your angle, window or door with a spirit level.
- Make several markers on the height of the wall.
- Using the ruler, draw the mark all the way up.
- Glue the wall with the special brush.

### 2. Lay the non-woven paper

- To apply the non-woven wallpaper, leave from the top of the wall:
- Unroll the roll and position the paper without cutting it (unless it is spliced) along the guide line. Make it exceed about 5 cm in height for cutting.
- Rub the wallpaper with the special brush, starting from the inside out to chase the air.
- Check by taking a step back that the lé is well positioned. Continue laying the length.

- Cut out the surplus at the ceiling and the plinth, using the maroufleur and the cutter.
- Repeat the steps for the rest of the surface, making sure to lay each leg straight and without worrying for the moment of the location of the sockets and switches.
- Pass the roulette wheel on the edges of the strips to prevent them from standing up.
- Gradually remove the glue overload with a damp sponge dabbing. Be careful not to rub wet paper.

### 3. Make the last cuts on the non-woven wallpaper

- To finish at plugs or switches:
- On the wallpaper, draw the diagonals between the corners of the socket or switch.
- Drill the center with the cutter.
- Cut towards the corners, so as to make a cross.
- Open gently and then unscrew without removing the screws from the switch and move it a little away from the wall.
- Gently fold the paper on the wall around the unit, then press down to flush out any blisters.
- Replace the switch and tighten its screws.

For any question, do not hesitate to contact us at +33 (0)1 77 17 13 11

By email at [info@antoINETTEpoisson.com](mailto:info@antoINETTEpoisson.com)